


PowerShot A700 SYSTEM MAP

DIGITAL CAMERA

Supplied with Camera

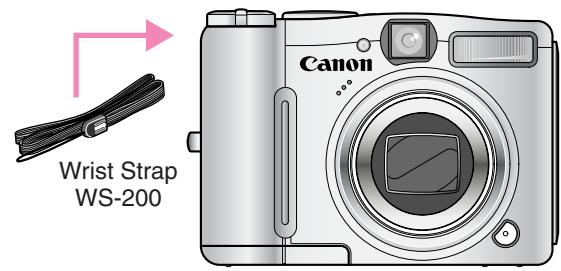

Wrist Strap
WS-200

AA Alkaline
Batteries (x2)

Interface Cable IFC-400PCU*1

AV Cable AVC-DC300*1

Memory Card
(16MB)


Canon Digital Camera
Solution Disk

Battery and Charger Kit CBK4-300*5



- Battery Charger CB-5AH/
CB-5AHE
- AA-size NiMH batteries NB-3AH
(x4)
- NiMH Battery NB4-300 (set of 4
AA-size) also available separately
- This camera requires two batteries

AC Adapter Kit ACK800

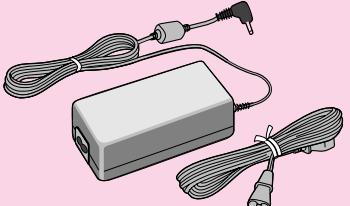

- Compact Power Adapter CA-PS800
- Power Cord

Conversion Lens Adapter
LA-DC58G



Wide Converter
WC-DC58N



Tele-converter
TC-DC58N




Close-up Lens
250D (58mm)



High-Power Flash
HF-DC1



Compact Photo Printer*3
(SELPHY CP series)

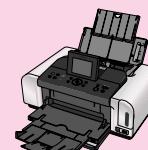

Direct Print Compatible
Bubble Jet Printer (PIXMA
series/SELPHY DS series)

Direct Interface
Cable*2

SD Memory Card*4
• SDC-128M
• SDC-512MSH

Video IN Terminal



Audio IN Terminal

TV/Video

*1 Also available for purchase separately.

*2 See the user guide supplied with the Bubble Jet printer
for more information on the printer and interface cables.

*3 This camera can also be connected to the Card Photo
Printer CP-10/CP-100/CP-200/CP-300.

*4 Not sold in some regions.

*5 Battery Charger Kit CBK4-200 may also be used.

Confirming the Package Contents

Your camera package includes all of the following items. If any of these items are missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap WS-200
- AA Alkaline Batteries (x2)
- Memory Card (16MB)
- Interface Cable IFC-400PCU
- AV Cable AVC-DC300
- Canon Digital Camera Solution Disk
- Basic Camera User Guide
- Advanced Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- System Map (this sheet)
- Warranty Card
- "For Windows® XP and Mac OS X Users" Leaflet
- "Canon Customer Support" Leaflet

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Lenses, Lens Adapter

● Conversion Lens Adapter LA-DC58G

This adapter is required for mounting the wide converter, tele-converter and close-up lens to the camera.

● Wide Converter WC-DC58N

Converts the focal distance of the body lens by a factor of approximately 0.7 when attached.

● Tele-converter TC-DC58N

Converts the focal distance of the body lens by a factor of approximately 1.75 when attached.

● Close-up Lens 250D (58mm)

A lens for shooting subjects at high magnifications.

Flash

● High-Power Flash HF-DC1

This attachable supplementary flash can be used to capture the photographic subjects that are too distant for the built-in flash to illuminate.

Power Supplies

● AC Adapter Kit ACK800

This kit lets you power the camera from any standard household power outlet.

Recommended to power a camera for an extended period of time or when connecting to a computer.

● Battery and Charger Kit CBK4-300

This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.

● NiMH Battery NB4-300

A set of four rechargeable AA-size NiMH batteries.

(This camera requires two batteries.)

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce photo quality prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls.

● Compact Photo Printers (SELPHY series)

● Bubble Jet Printers

For more information, visit your nearest Canon retailer.